


FRONT PANEL ADDRESS/DATA DISPLAY SWITCH REGISTER

COPYRIGHT (C) 2003 BY SPARE TIME CIZMOS
 ALL RIGHTS RESERVED. REFER TO LICENSE FILE FOR DETAILS.

20:26:00 17-Jul-03 PANEL1

SIZE C

SHEET 1 OF 3

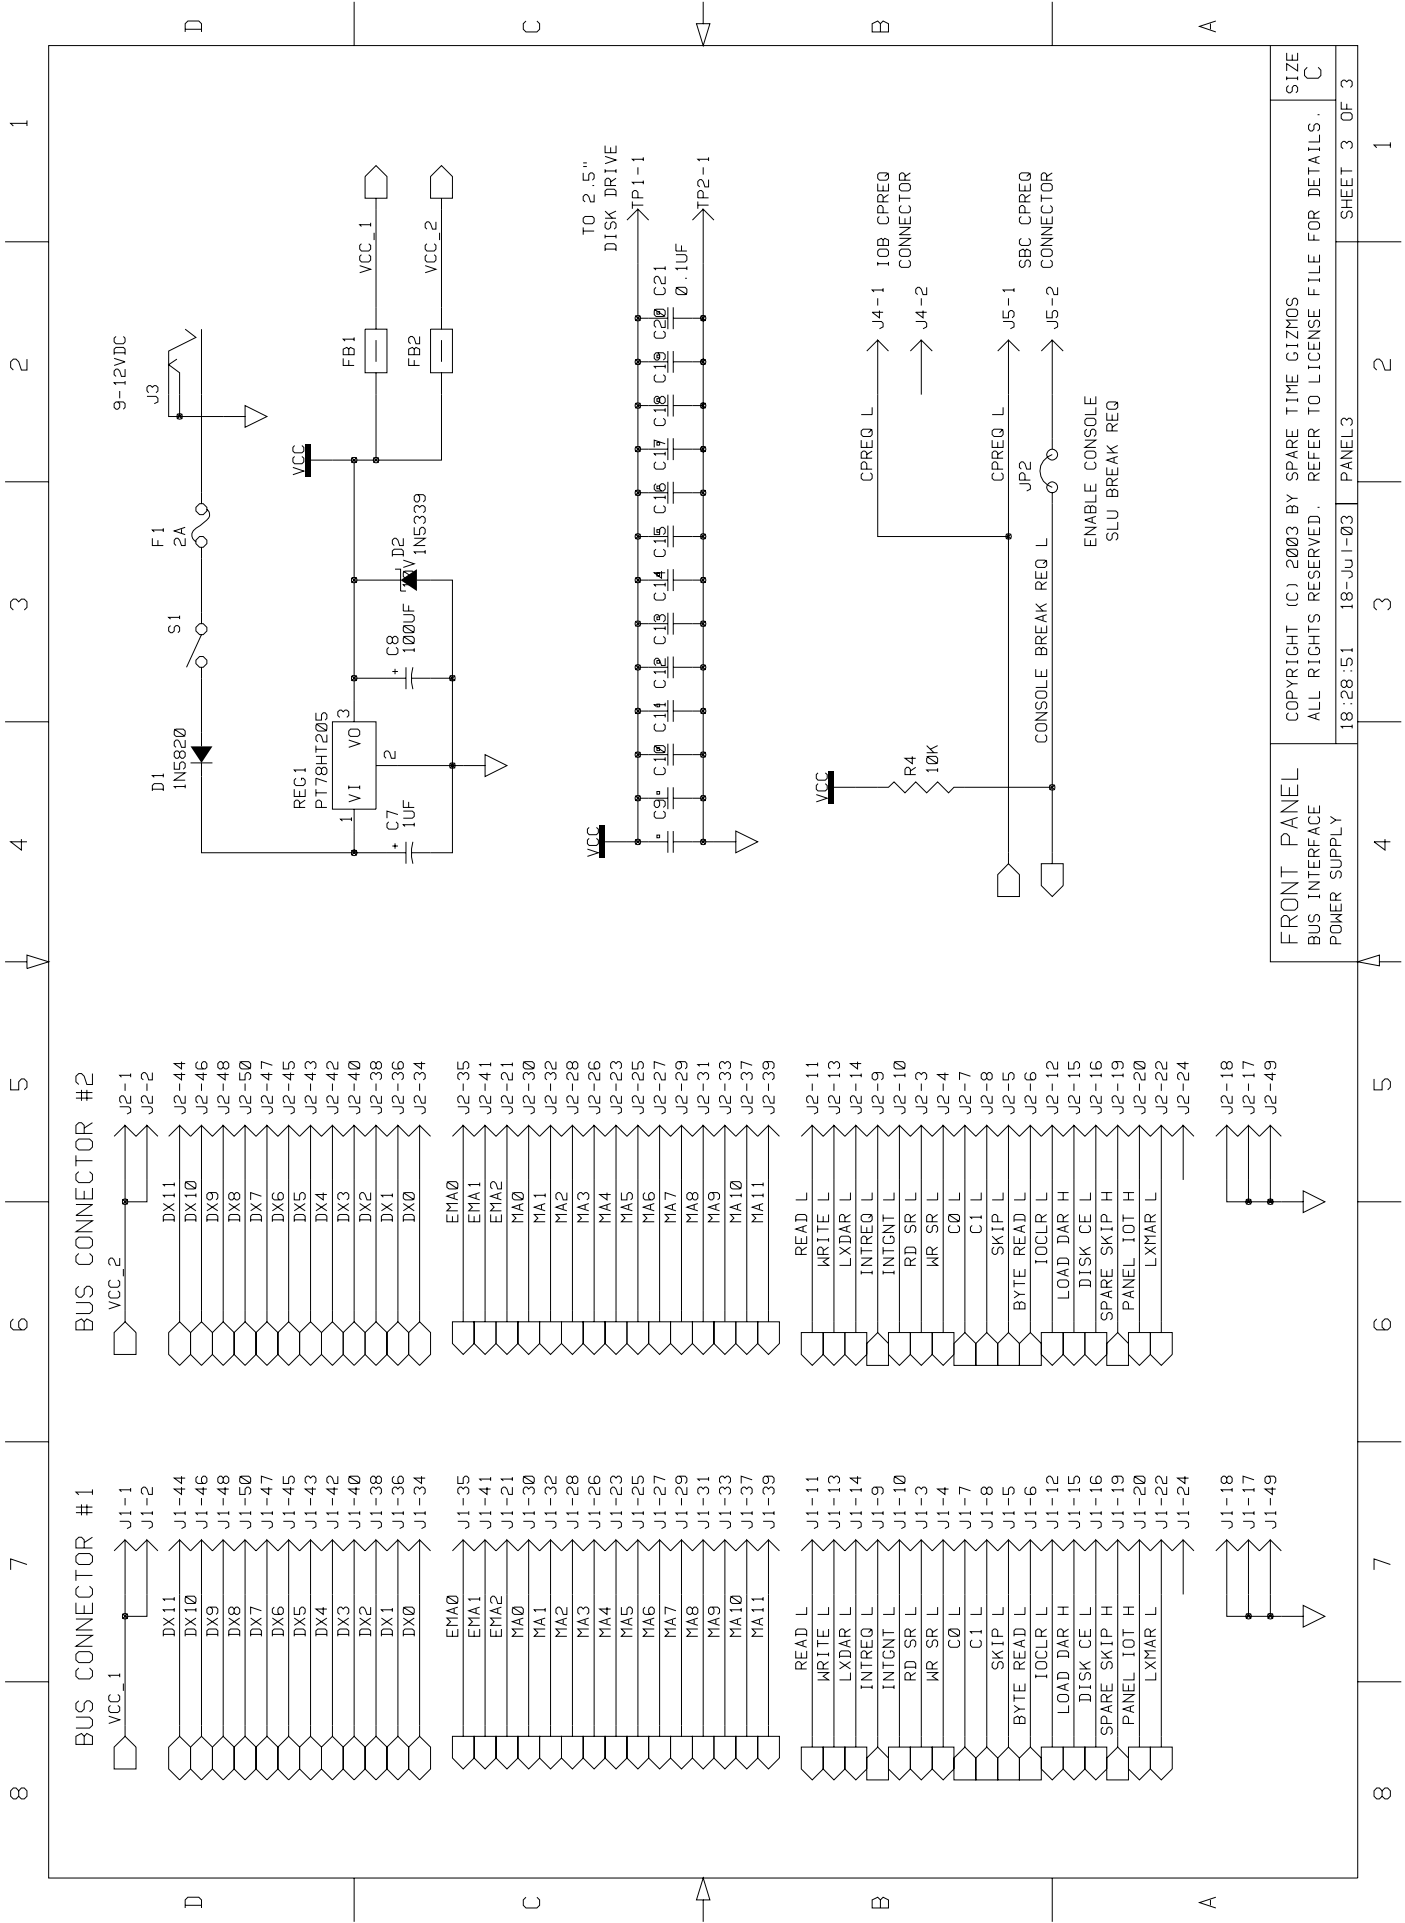

BUS CONNECTOR #2

- J2-1 VCC_2
- J2-2
- DX11
- J2-44
- DX10
- J2-46
- DX9
- J2-48
- DX8
- J2-50
- DX7
- J2-47
- DX6
- J2-45
- DX5
- J2-43
- DX4
- J2-42
- DX3
- J2-40
- DX2
- J2-38
- DX1
- J2-36
- DX0
- J2-34

BUS CONNECTOR #1

- J1-1 VCC_1
- J1-2
- DX11
- J1-44
- DX10
- J1-46
- DX9
- J1-48
- DX8
- J1-50
- DX7
- J1-47
- DX6
- J1-45
- DX5
- J1-43
- DX4
- J1-42
- DX3
- J1-40
- DX2
- J1-38
- DX1
- J1-36
- DX0
- J1-34

- EMA0
- EMA1
- EMA2
- MA0
- MA1
- MA2
- MA3
- MA4
- MA5
- MA6
- MA7
- MA8
- MA9
- MA10
- MA11
- J2-35
- J2-41
- J2-21
- J2-30
- J2-32
- J2-28
- J2-26
- J2-23
- J2-25
- J2-27
- J2-29
- J2-31
- J2-33
- J2-37
- J2-39

- EMA0
- EMA1
- EMA2
- MA0
- MA1
- MA2
- MA3
- MA4
- MA5
- MA6
- MA7
- MA8
- MA9
- MA10
- MA11
- J1-35
- J1-41
- J1-21
- J1-30
- J1-32
- J1-28
- J1-26
- J1-23
- J1-25
- J1-27
- J1-29
- J1-31
- J1-33
- J1-37
- J1-39

- READ L
- WRITE L
- LXDAR L
- INTREQ L
- INTGNT L
- RD SR L
- WR SR L
- C0 L
- C1 L
- SKIP L
- BYTE READ L
- IOCLR L
- LOAD DAR H
- DISK CE L
- SPARE SKIP H
- PANEL IOT H
- LXMAR L
- J2-11
- J2-13
- J2-14
- J2-9
- J2-10
- J2-3
- J2-4
- J2-7
- J2-8
- J2-5
- J2-6
- J2-12
- J2-15
- J2-16
- J2-19
- J2-22
- J2-24

- READ L
- WRITE L
- LXDAR L
- INTREQ L
- INTGNT L
- RD SR L
- WR SR L
- C0 L
- C1 L
- SKIP L
- BYTE READ L
- IOCLR L
- LOAD DAR H
- DISK CE L
- SPARE SKIP H
- PANEL IOT H
- LXMAR L
- J1-11
- J1-13
- J1-14
- J1-9
- J1-10
- J1-3
- J1-4
- J1-7
- J1-8
- J1-5
- J1-6
- J1-12
- J1-15
- J1-16
- J1-19
- J1-20
- J1-22
- J1-24

- J2-18
- J2-17
- J2-49

- J1-18
- J1-17
- J1-49

FRONT PANEL
BUS INTERFACE
POWER SUPPLY

COPYRIGHT (C) 2003 BY SPARE TIME CIZMOS
ALL RIGHTS RESERVED. REFER TO LICENSE FILE FOR DETAILS.

SIZE
C

18:28:51 18-Jul-03 PANEL3

SHEET 3 OF 3